



LCD Monitor Arm

Fitting Check-List

01	Elastic Clip	2pcs		04	Allen Key	1pcs	
02	Screw	2pcs		05	Wrench	1pcs	
03	Small Screw	4pcs		06	Pad	1pcs	

Assembly Guide

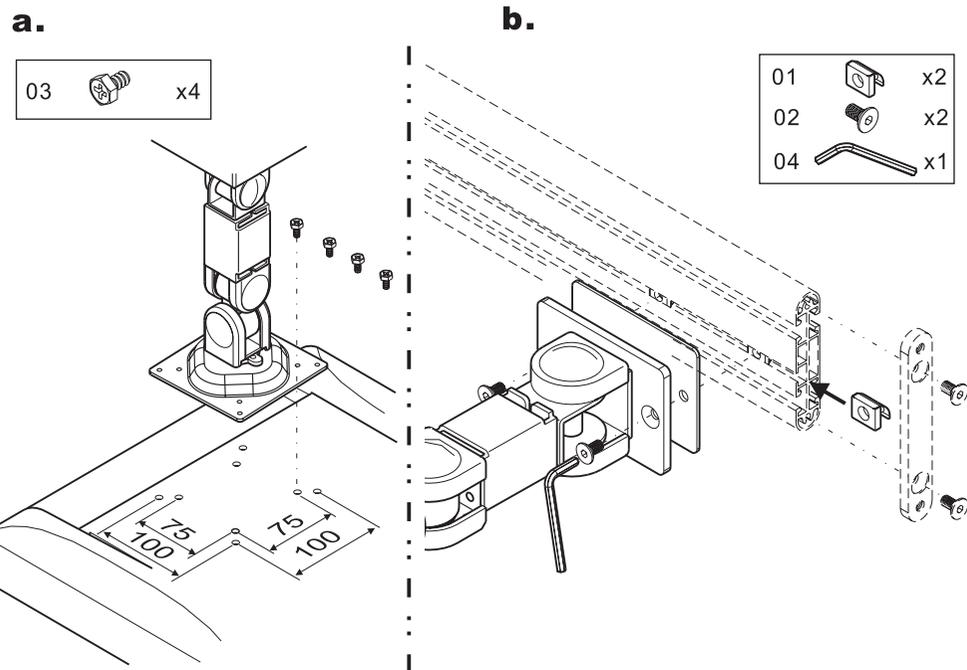

Caution:


- Standard product fit VESA interface 75*75mm and 100*100mm,
- Before assembling, please check assembly guide thoroughly to avoid any mistake.
- Weight capacity for 1-6kg LCD monitors.
- Standard products include several small parts, keep out of children when assemble this product and prevent children from swallowing them.
- Do not put your fingers on the joint during arm moving to prevent from clipping.

LA-18PV

2008.01.10

Adjusting Universal Joint Tension

When assembling the arm with monitors of differing weights, you may find that the tension of the universal joint needs to be adjusted to ease movement or to maintain the desired monitor position. If so, adjust as follows:

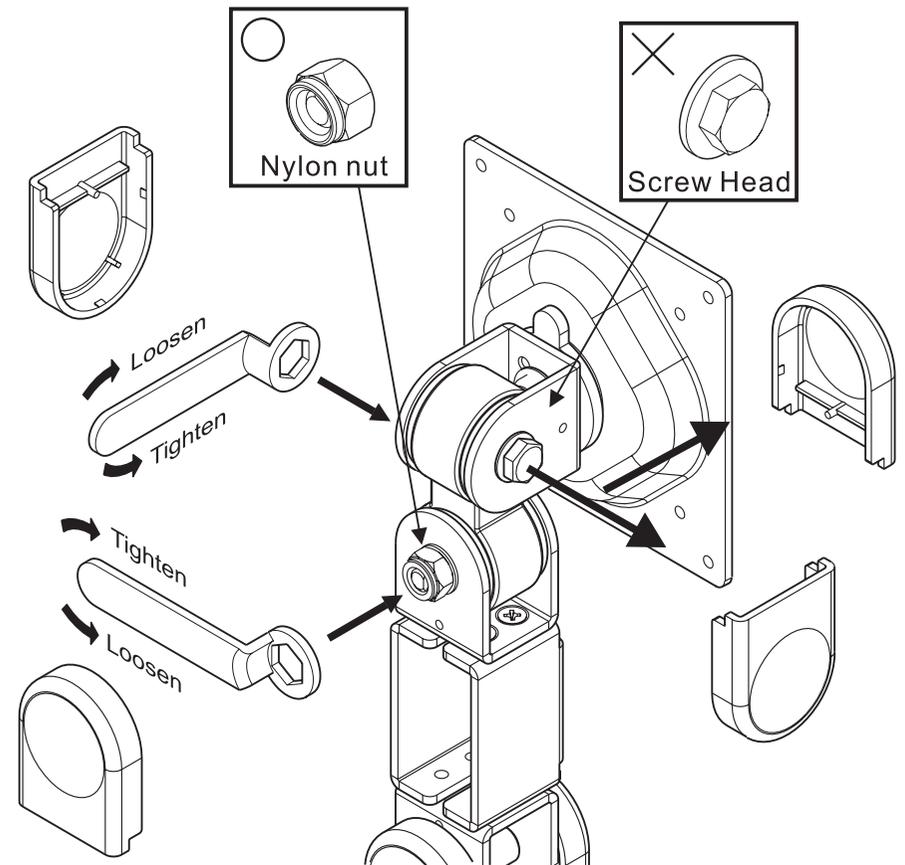

- Remove the four plastic universal joint covers
- Find the nylon nut (not the screw head) and use the included wrench to adjust the tension.
- Use one hand to support the monitor and adjust the tension of the universal joint.
 - Clockwise : more tension
 - Counterclockwise : less tension
- When the desired tension is achieved, replace the four plastic covers.

Caution:

- Support the monitor during the adjustment procedure.
- Only adjust the nylon nut (not the screw head).
- Do not disassemble the universal joint .