

5



Skjut in lådan på expansionerna så att bakkanten låses fast i hakarna som finns utstansade på expansionernas bakkant.

Push the drawer into the expansions, make sure that the back is fixed in the hooks on the back edge of the expansions.

Monteringsanvisning - Assembly instruction

Reflect B-låda för bredd 800 mm

Reflect B-drawer for width 800 mm



6



Stäng sedan lådan, tryck till hårt när lådan är stängd så att det hörs ett KLICK, därefter är lådan "låst" mot expansionerna.

Close the drawer, give the drawer a hard push until you hear a CLICK, after that the drawer is "locked" into the expansions.



AB Edsbyverken, Box 300, SE-828 25 Edsbyn
Tel/Phone +46 (0)271-27500, Fax +46 (0)271-27501
www.edsbyn.com

Date:
2007-08-24

Nr:
00530042

1

Om lådan skall monteras högst upp mot skivan skall expansionen monteras i det översta hålet.

Om flera lådor skall monteras in skall avståndet mellan expansionernas hål vara 192 mm.

Vi rekommenderar att inte montera fler än två lådor. Om fler lådor önskas SKALL ett antitilt-system monteras. Detta bör göras från fabrik.

If the drawer shall be assembled uppermost next to the top, the expansion is to be placed in the upper hole.

If many drawers shall be assembled the distance between the expansion holes should be 192 mm.

We do not recommend assembly of more than two drawers. If more than two drawers are wanted an anti-tilt device HAS TO be assembled. That should be done in the factory.



Montera i expansionens andra hål.
Assemble in the second hole of the expansion.



2




Om lådan skall monteras mot hyllplan skall expansionen monteras i första hålet under hyllplanet.



Montera i expansionens andra hål.
Assemble in the second hole of the expansion.


If the drawer shall be assembled towards a shelf the expansion should be assembled in the first hole under the shelf.

3

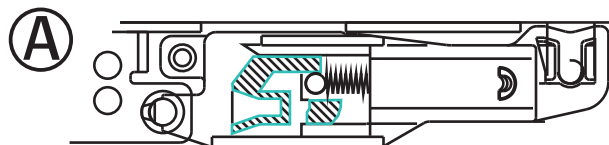

Aktivera antitilt mekanismen med att dra framåt, uppåt så att den placeras enligt bild B. Detta SKALL göras innan låda monteras.

Activate the anti-tilt device by pulling it forward, upward for getting it in the same position as picture B. This SHOULD be done before assembly of the drawer.

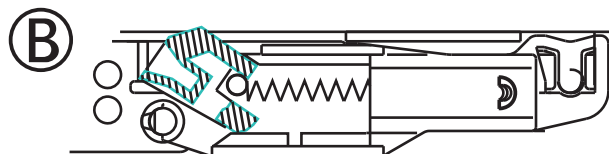

4

