

5



## Monteringsanvisning - Assembly instruction

Reflect S-låda för bredd 800 mm

Reflect S-drawer for width 800 mm



**edsbyn**<sup>®</sup>  
MONTORSMÖBLER

AB Edsbyverken, Box 300, SE-828 25 Edsbyn  
Tel/Phone +46 (0)271-27500, Fax +46 (0)271-27501  
[www.edsbyn.com](http://www.edsbyn.com)


Date:

2007-08-20

Nr:

00530041

1

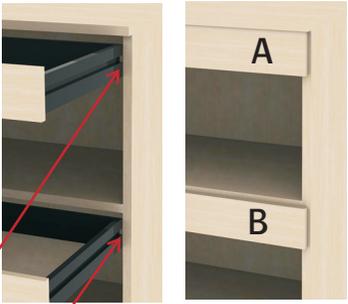

Prova in lådan i skåpet enligt skiss, och kontrollera spår i låda mot hål i sidan var expansionen skall monteras.

**A** Om lådan skall monteras högst upp mot skivan skall lådförstycket vara strax under skivan.

**B** Om lådan skall monteras mot hyllplan skall lådförstycket täcka ca: 1/3 del av hyllplanet.

Om flera lådor skall monteras in skall avståndet mellan expansioner vara 96 mm.

**A**

Put the drawer into the cabinet according to the picture, and check that the rail of the drawer is placed against the holes of the side where the extension is to be assembled.

**B**

If the drawer shall be assembled uppermost next to the top, the drawer front is to be placed just under the top.


If the drawer shall be assembled towards a shelf the drawer front should cover about 1/3 part of the shelf.

If many drawers shall be assembled the distance between the extensions should be 96 mm.

2



3

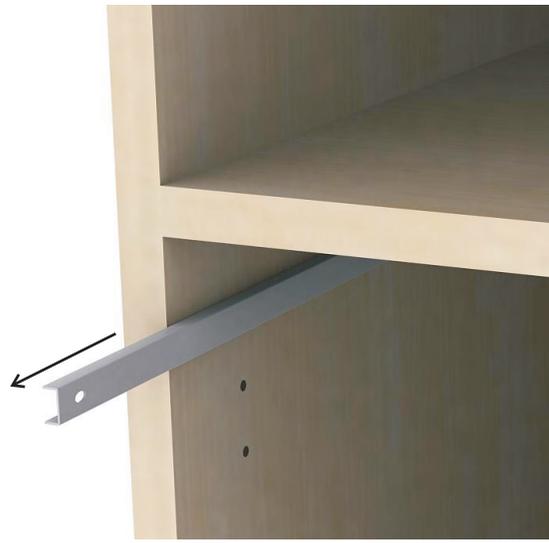

4

